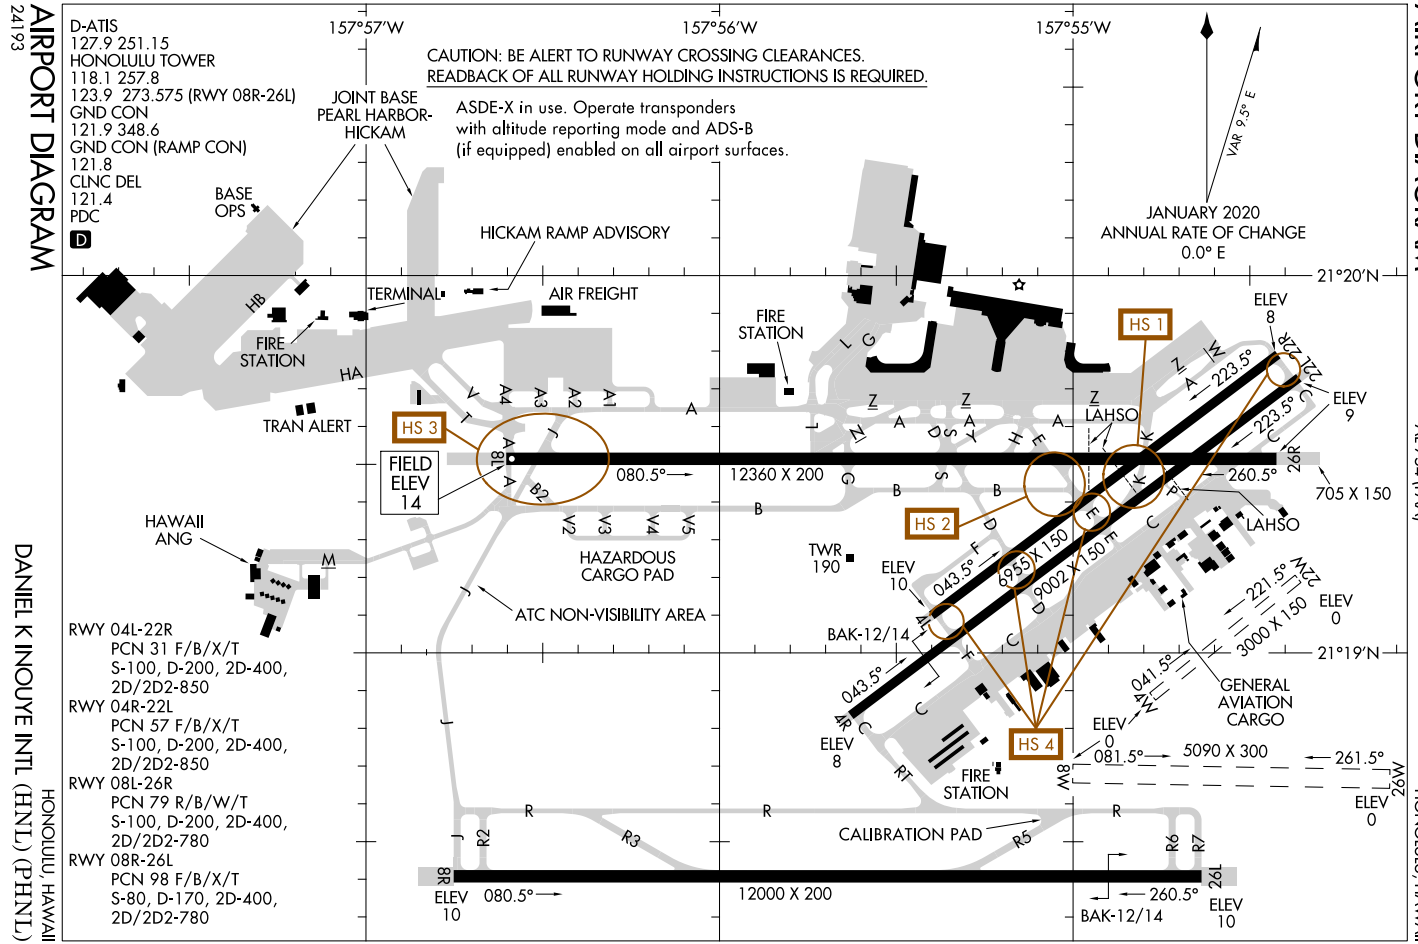
AIRPORT DIAGRAM
24193
DANIEL K INOUYE INTL (HNL) (PHNL)
HONOLULU, HAWAII
D-ATIS
127.9 251.15
HONOLULU TOWER
118.1 257.8
123.9 273.575 (RWY 08R-26L)
GND CON
121.9 348.6
GND CON (RAMP CON)
121.8
CLNC DEL
121.4
PDC
157°57'W
157°56'W
157°55'W
CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.
ASDE-X in use. Operate transponders with altitude reporting mode and ADS-B (if equipped) enabled on all airport surfaces.
JOINT BASE PEARL HARBOR-HICKAM
BASE OPS
HICKAM RAMP ADVISORY
VAR 9.5° E
JANUARY 2020
ANNUAL RATE OF CHANGE
0.0° E
21°20'N
TERMINAL
AIR FREIGHT
FIRE STATION
TRAN ALERT
HS 1
HS 2
HS 3
HS 4
FIELD ELEV 14
080.5°
12360 X 200
260.5°
705 X 150
LAHSO
HAWAII ANG
HAZARDOUS CARGO PAD
ATC NON-VISIBILITY AREA
TWR 190
ELEV 10
043.5°
6955 X 150
9002 X 150
BAK-12/14
221.5°
3000 X 150
ELEV 0
21°19'N
GENERAL AVIATION CARGO
041.5°
ELEV 8
081.5°
5090 X 300
261.5°
CALIBRATION PAD
12000 X 200
ELEV 10
223.5°
ELEV 9
AL-754 (FAA)
RWY 04L-22R
PCN 31 F/B/X/T
S-100, D-200, 2D-400, 2D/2D2-850
RWY 04R-22L
PCN 57 F/B/X/T
S-100, D-200, 2D-400, 2D/2D2-850
RWY 08L-26R
PCN 79 R/B/W/T
S-100, D-200, 2D-400, 2D/2D2-780
RWY 08R-26L
PCN 98 F/B/X/T
S-80, D-170, 2D-400, 2D/2D2-780