

LOC/DME I-RKS
109.3
Chan **30**

APP CRS
270°

Rwy Idg
TDZE
Apt Elev

10000
6765
6765

ILS or LOC RWY 27
SOUTHWEST WYOMING RGNL (RKS)

DME required.


▼

▲

MALSR

MISSED APPROACH: Climb to 7600 then climbing right turn to 9300 direct OCS VOR/DME and hold, continue climb-in-hold to 9300.

ASOS 118.375	SALT LAKE CENTER 124.35 353.5	UNICOM 122.8 (CTAF) 0
------------------------	---	---------------------------------

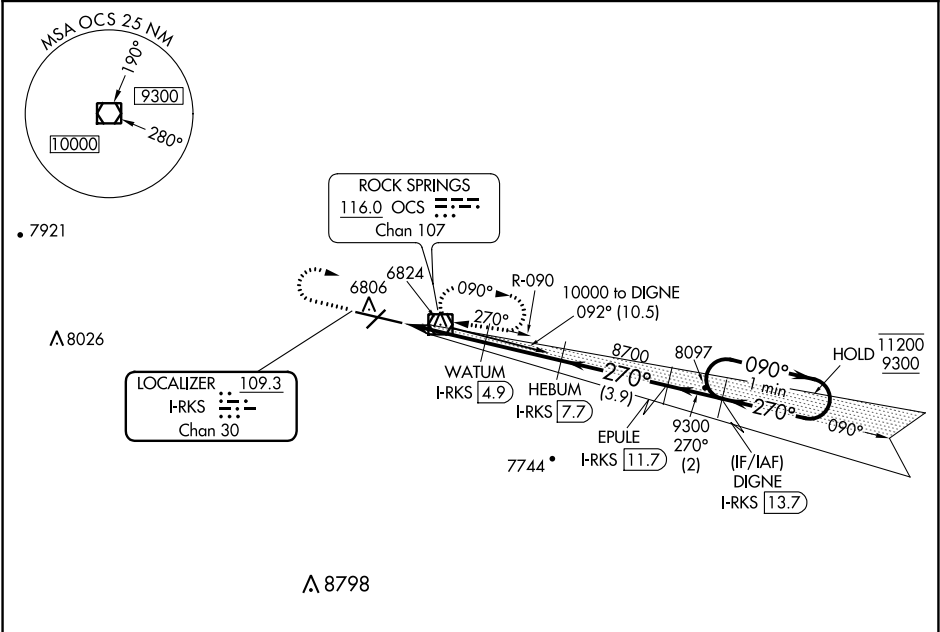

ELEV 6765	D	TDZE 6765
-----------	----------	-----------

7600	9300	OCS	Use I-RKS DME when on the localizer course.
*LOC only.	HEBUM I-RKS 7.7	EPULE I-RKS 11.7	DIGNE I-RKS 13.7
One Minute Holding Pattern			
11200 090° 9300 270° 9300			
GS 3.00° TCH 55			
0.9 2.2 NM 2.8 NM 3.9 NM 2 NM			

CATEGORY	A	B	C	D
S-ILS-27	6965-½ 200 (200-½)			
S-LOC 27	7100-½ 335 (400-½)			
C CIRCLING	7140-1 375 (400-1)	7220-1 455 (500-1)	7220-1½ 455 (500-1½)	7540-2½ 775 (800-2½)

MIRL Rwy 3-21
HIRL Rwy 9-27 0
REIL Rws 3 and 21 0

ROCK SPRINGS, WYOMING
Amdt 2A 08NOV18