


TACAN RWY 13L

VORTAC CBM 115.2 Chan 99		APCH CRS 142°		Rwy Idg 8001 TDZE 194 Arpt Elev 218		AL-91 [USAF]		COLUMBUS AFB (KCBM)	
▼ Missed Approach requires use of RNAV or ATC RADAR monitoring. When circling to Rwy 31R at night, operational VGSI required, remain on or above VGSI glidepath until threshold.					MISSED APPROACH: Climbing left turn to WOLOV and hold as published. Maintain 3000.				
ATIS★		APP CON★		TOWER★		GND CON★		CLNC DEL★	
115.2 273.5		126.075 239.25 N 134.55 350.3 SE 135.6 323.275 SW		126.65 379.925		121.9 275.8		269.55	

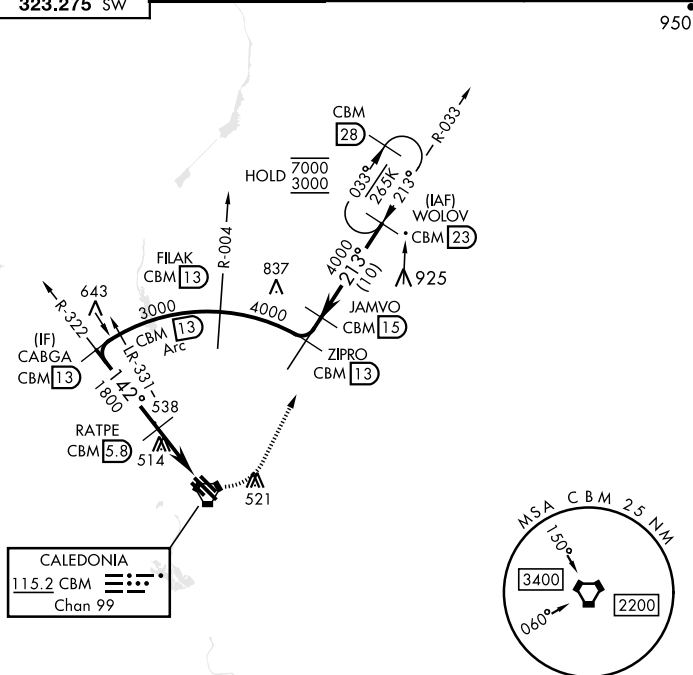

EMERG SAFE ALT 100 NM 3700

