

LOC I-BAF 111.9	APP CRS 204°	Rwy Idg 8919 TDZE 270 Apt Elev 270
---------------------------	------------------------	---

ILS or LOC RWY 20
WESTFIELD-BARNES RGNL (BAF)


T Circling Rwy 15 NA at night. DME from BAF VORTAC. DME use requires
A simultaneous reception of I-BAF and BAF DME. For inop ALS, increase
❄ S-ILS 20 Cat E visibility to RVR 4000; increase S-LOC 20 Cat E visibility to
 -21°C 3 SM; increase PETGE fix minimums S-LOC 20 Cat E visibility to 1 ½ SM.

MALSR

MISSED APPROACH: Climb to 1300 then climbing right turn to 4000 direct CTR VOR/DME and hold, continue climb-in-hold to 4000.

ATIS 127.1 263.15	BRADLEY APP CON 125.35 281.5	WESTFIELD TOWER ★ 118.9 (CTAF) 0 251.1	GND CON 121.7 289.4	CLNC DEL 121.7
----------------------	---------------------------------	---	------------------------	-------------------

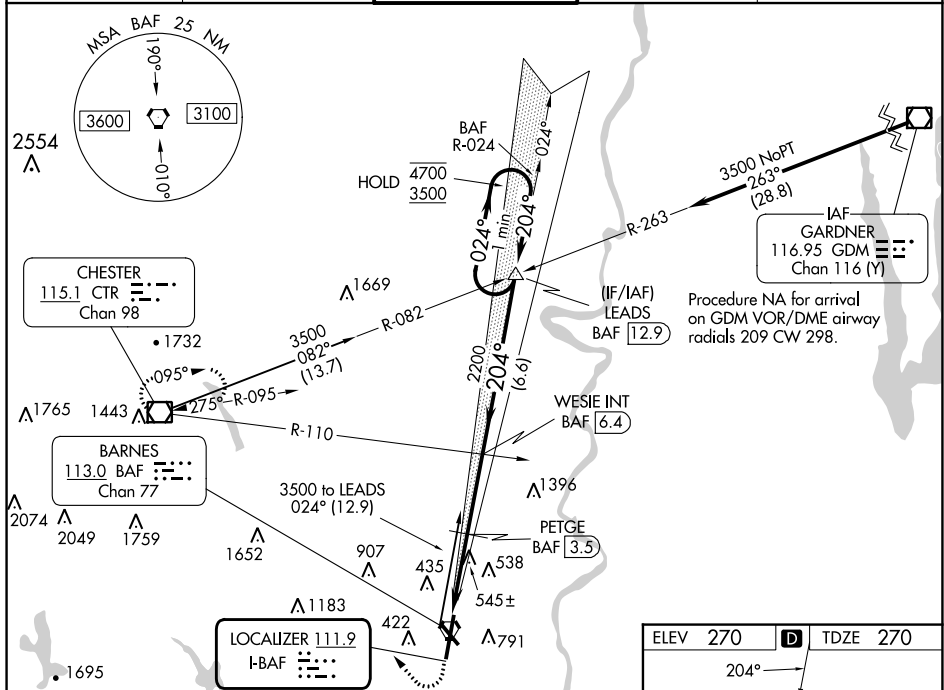

1300 ↑	4000 ↘	CTR ☐	* LOC only.	WESIE INT BAF 6.4	LEADS BAF 12.9	One Minute Holding Pattern
CATEGORY	A		B	C	D	E
S-ILS 20	520/24 250 (300-½)					
S-LOC 20	1260/40 990 (1000-¾)	1260/55 990 (1000-1)	1260-2½	990 (1000-2½)		
C CIRCLING	1260-1¼ 990 (1000-1¼)	1260-1½ 990 (1000-1½)	1260-3 990 (1000-3)	1660-3 1390 (1400-3)		
PETGE FIX MINIMUMS (DME REQUIRED)						
S-LOC 20	800/24	530 (600-½)	800/55	530 (600-1)		
C CIRCLING	1160-1¼	890 (900-1¼)	1160-2¾ 890 (900-2¾)	1660-3 1390 (1400-3)		

