


VORTAC SZW <b>117.5</b> Chan <b>122</b>	APP CRS <b>353°</b>	Rwy ldg TDZE Apt Elev <b>7000</b> <b>62</b> <b>83</b>
---	------------------------	--

# VOR or TACAN RWY 36

TALLAHASSEE INTL (TLH)

DME required.		MALS R ASR		MISSED APPROACH: Climb to 4000 direct SZW VORTAC and on SZW VORTAC R-288 to QUILL/SZW 11.8 DME and hold, continue climb-in-hold to 4000.	
For inop ALS, increase VOR Cat E visibility to RVR 6000. For inop ALS, increase TACAN Cat E visibility to RVR 6000.					

ATIS <b>119.45 239.25</b>	TALLAHASSEE APP CON* <b>135.8 317.4</b>	TALLAHASSEE TOWER* <b>118.7(CTAF) 257.8</b>	GND CON <b>121.9 348.6</b>	CLNC DEL <b>126.65 275.8</b>	UNICOM <b>123.075</b>
------------------------------	--	--	-------------------------------	---------------------------------	--------------------------

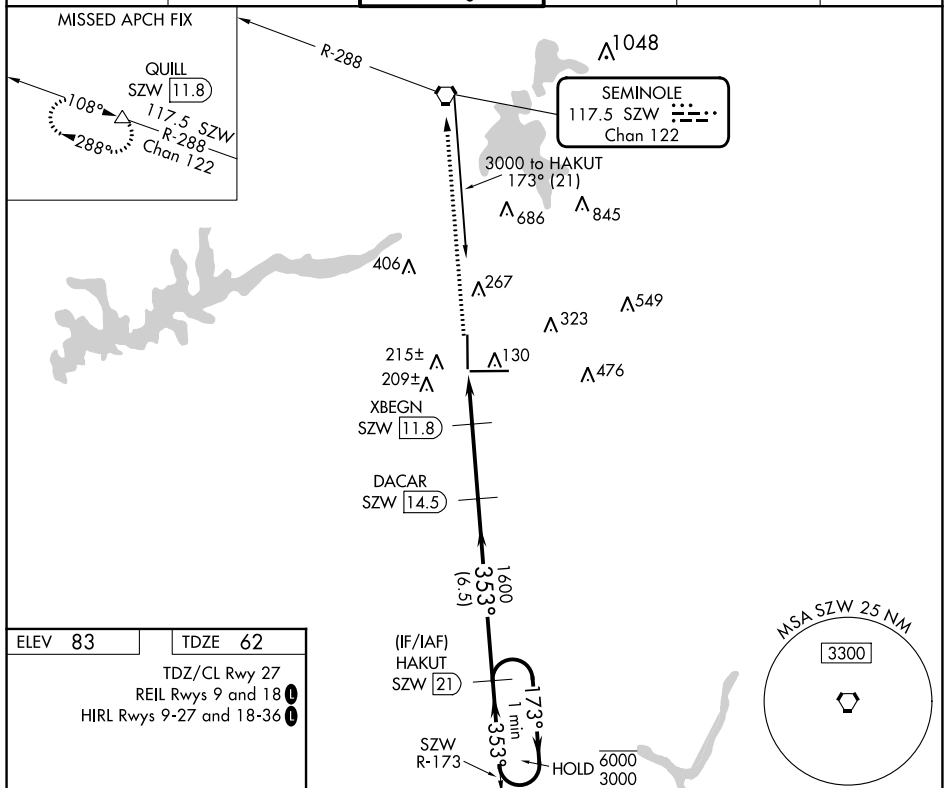

ELEV 83	TDZE 62
---------	---------

TDZ/CL Rwy 27  
REIL Rwy 9 and 18  
HIRL Rwy 9-27 and 18-36

