


LOC I-UXW <u>109.3</u>	APP CRS 094°	Rwy Idg 8412 TDZE 790 Apt Elev 798
----------------------------------	------------------------	---

ILS or LOC RWY 9R
SOUTH BEND INTL (SBN)

ADF required.




MALSF



MISSED APPROACH: Climb to 3000 direct MISHA LOM/INT and hold, continue climb-in-hold to 3000.

ATIS 120.675	SOUTH BEND APP CON ★ 118.55 257.8	SOUTH BEND TOWER ★ 135.675 (CTAF) 0 257.8	GND CON 121.7	CLNC DEL 121.9
------------------------	---	---	-------------------------	--------------------------

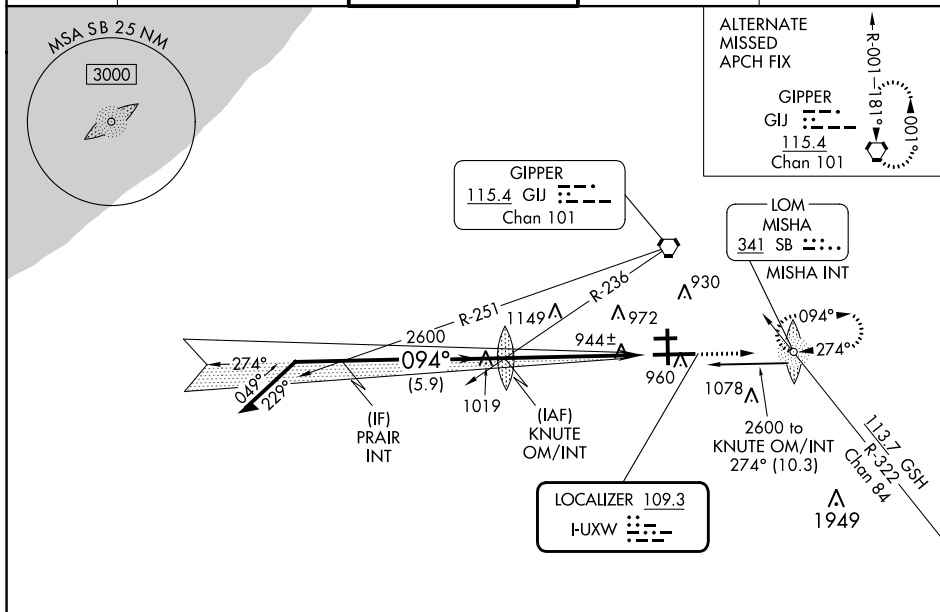

FAF to MAP 5.3 NM					
Knots	60	90	120	150	180
Min:Sec	5:18	3:32	2:39	2:07	1:46

ILS or LOC RWY 9R