
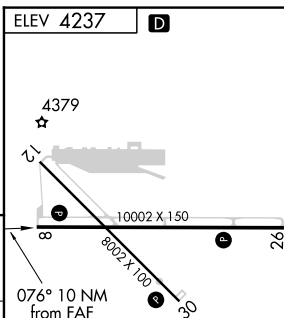


21112

VOR/DME-B
WENDOVER (ENV)

MISSED APPROACH: Climb to 9000 direct
BVL VORTAC and hold, continue climb-in-hold to 9000.

UNICOM
122.8 (CTAF) 



WENDOVER (ENV)
VOR/DME-B