
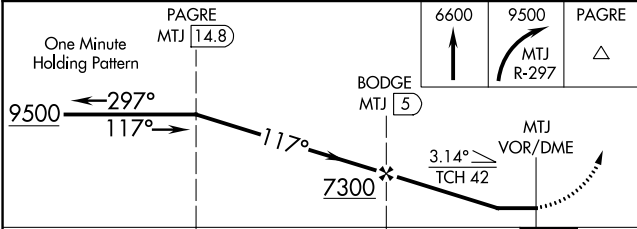


VOR/DME MTJ	APP CRS	Rwy ldg TDZE	7510 5723
117.1	117°	Apt Elev	5759
Chan 118			

VOR RWY 13
 MONTROSE RGNL (MTJ)

DME required. ⚠ Straight-in Rwy 13 at night, operational VGSI required, remain on or above VGSI glidepath until threshold. Rwy 13 helicopter visibility reduction below 1 SM NA. Circling Rwy 31 NA at night. Circling NA east of Rwy 17 and northeast of Rwy 31. When local altimeter setting not received, use Delta altimeter setting: increase all MDAs 140 feet and visibility S-13 Cats C and D ½ SM and Circling Cat C ¼ SM.	MISSED APPROACH: Climb to 6600 then climbing right turn to 9500 on MTJ VOR/DME R-297 to PAGRE/14.8 DME and hold.
---	---

ASOS 135,225	DENVER CENTER 127.1 343.65	UNICOM 122.8 (CTAF) 0
----------------------------	--	-------------------------------------

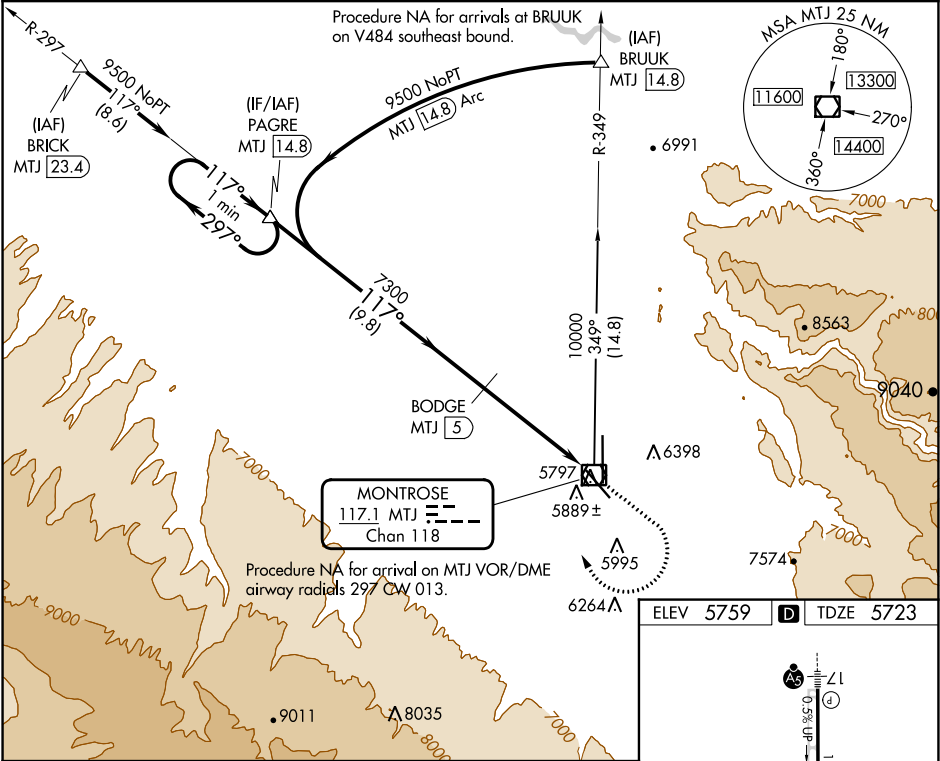

CATEGORY	A	B	C	D
S-13	6140-1	417 (400-1)	6140-1½	417 (400-1½)
CIRCLING	6280-1 521 (600-1)	6420-1 661 (700-1)	6640-2¾ 881 (900-2¾)	6800-3 1041 (1100-3)

