

VOR/DME VCN	APP CRS	Rwy Idg TDZE	N/A
115.2	216°		N/A
Chan 99		Apr Elev	85

VOR-A

MILLVILLE MUNI (MIV)



▼

▲

When local altimeter setting not received, use Atlantic City altimeter setting and increase all MDAs 60 feet and visibility Circling Cat C ¼ SM.

MISSED APPROACH: Climbing left turn to 2000 direct VCN VOR/DME and hold.

ASOS 119.6	ATLANTIC CITY APP CON 124.6 327.125	UNICOM 123.0 (CTAF) 0
---------------	--	--------------------------

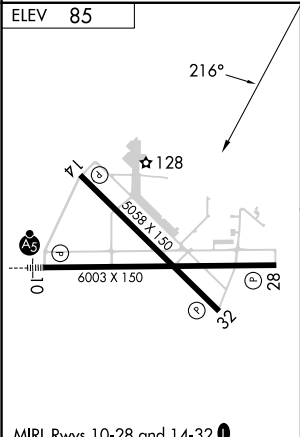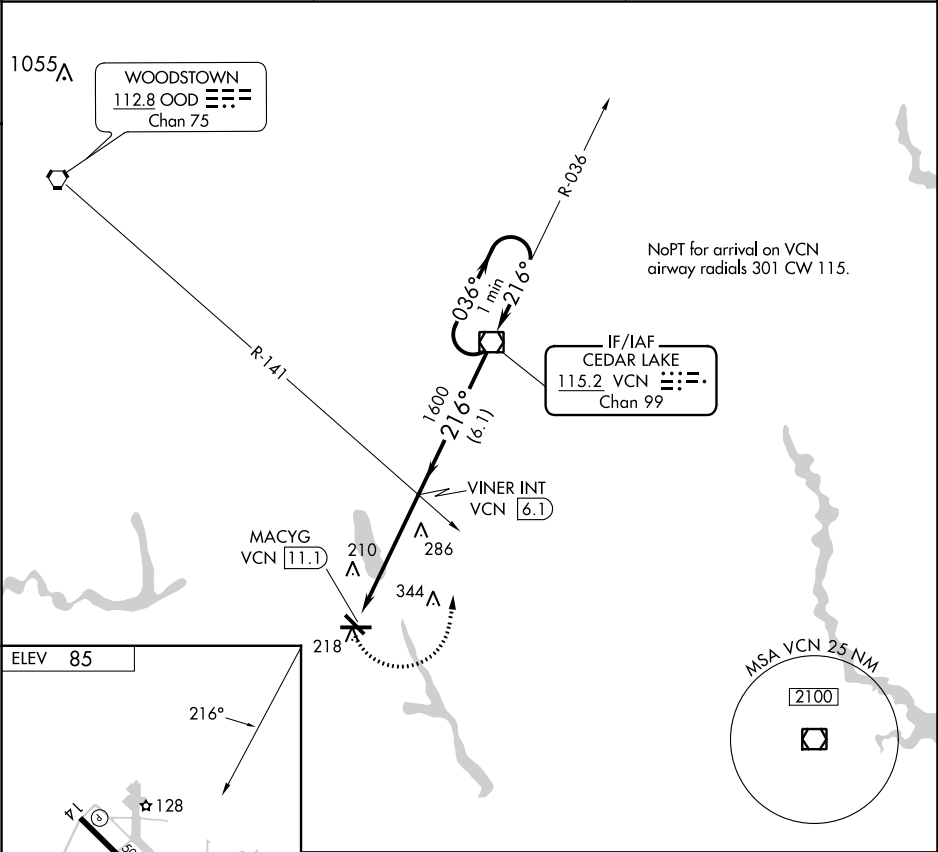

MIRL Rwy 10-28 and 14-32

FAF to MAP 5.1 NM				
Knots	60	90	120	150
Min:Sec	5:06	3:24	2:33	2:02
				1:42

VCN

VINER INT VCN 6.1

VCN VOR/DME

One Minute Holding Pattern

MACYGC VCN 11.1

1600

216°

036°

2000

216°

5.1 NM

6.1 NM

CATEGORY	A		B		C		D	
CIRCLING	600-1		515 (600-1)		660-1½ 575 (600-1½)		660-2 575 (600-2)	