


WAAS CH 86228 W35A	APP CRS 352°	Rwy Idg 3909 TDZE 1738 Apt Elev 1738
--	------------------------	---

RNAV (GPS) RWY 35
BRUCE FLD (E30)

 NA	DME/DME RNP-0.3 NA. Use San Angelo Rgnl/Mathis Fld altimeter setting, if not received use Curtis Field altimeter setting and increase all DA/MDAs 20 feet.	MISSED APPROACH: Climb to 3500 direct RIREE and hold.
--	--	---

SAN ANGELO APP CON ★	CTAF
125.35 354.1	122.9

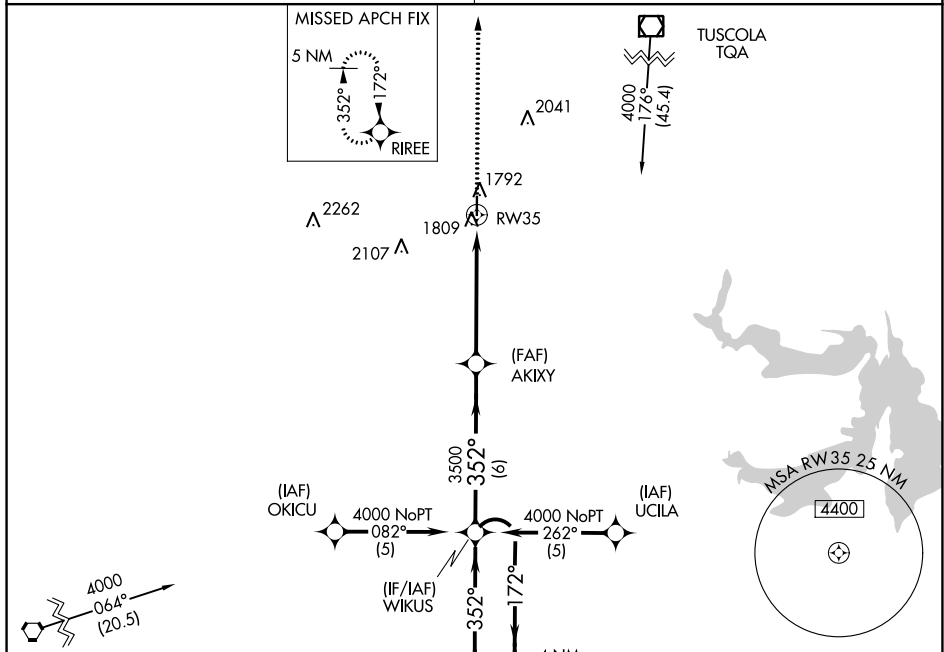


SAN ANGELO
SJT Procedure NA for arrivals
at SJT VORTAC
via airway radials 014 CW 102

4 NM

ELEV 1738 TDZE 1738
MIRL Rwy 17-35

3283

1790

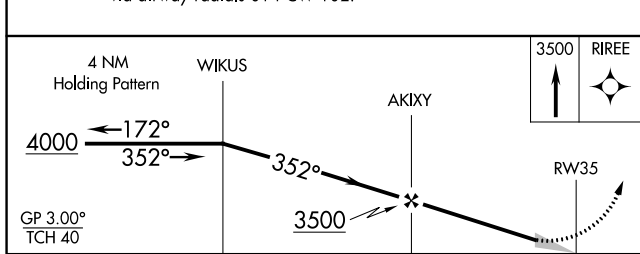

CATEGORY		A		B		C		D	
LPV	DA	2089-1¼		351 (400-1¼)				NA	
LNAV	MDA	2160-1	422 (500-1)		2160-1¼		422 (500-1¼)		NA
CIRCLING		2220-1	482 (500-1)		2220-1½		482 (500-1½)		NA