

VOR/DME VNY	APP CRS	Rwy Idg	N/A
113.1	046°	TDZE	N/A
Chan 78		Apt Elev	1003

VOR-A


WHITEMAN (WHP)

⚠

When local altimeter setting not received, use Burbank altimeter setting. Procedure NA at night.

MISSED APPROACH: Climbing left turn to 3900 direct VNY VOR/DME then on VNY VOR/DME R-255 to CANOG INT/ 5.1 DME and hold.

ATIS	SOCAL APP CON	WHITEMAN TOWER ★	GND CON	UNICOM
132.1	120.4 360.6 (NORTH) 134.2 338.2 (WEST)	135.0 (CTAF)	125.0	122.95

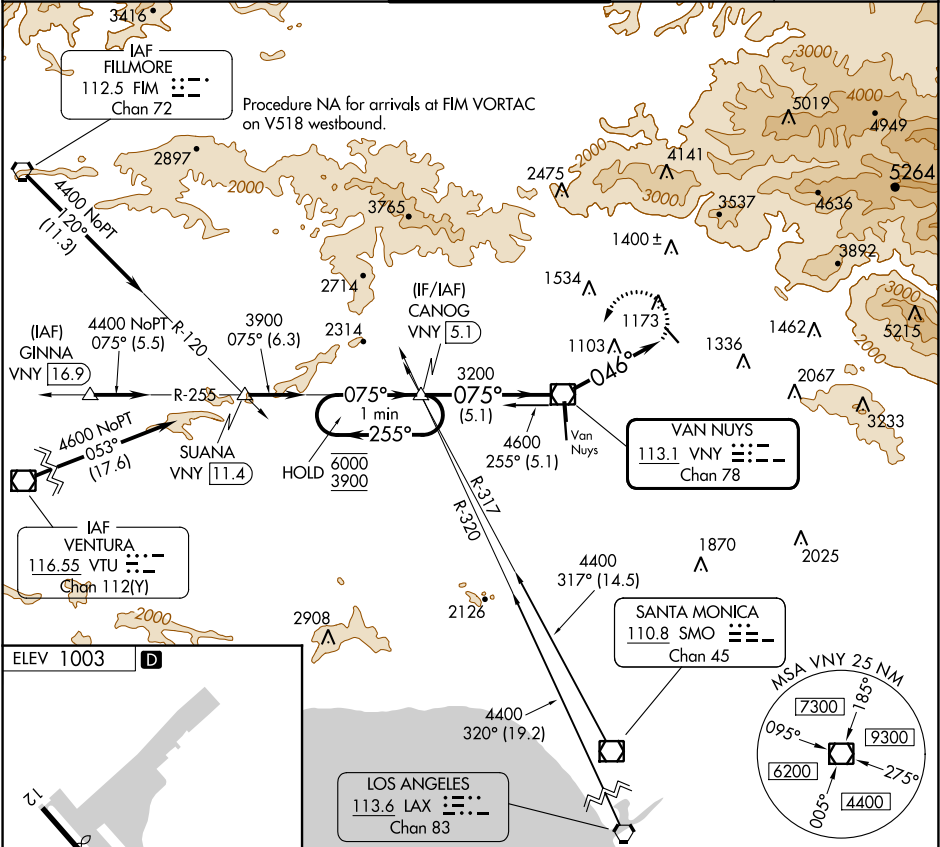

ELEV 1003 **D**

REIL Rwys 12 and 30
MIRL Rwy 12-30

FAF to MAP 4 NM

Knots	60	90	120	150	180
Min:Sec	4:00	2:40	2:00	1:36	1:20

CANOG INT VNY 5.1

One Minute Holding Pattern

6000 ← 255°
3900 → 075°

075°

046°

3200

VNY VOR/DME

VNY 4

5.1 NM

4 NM

CATEGORY	A	B	C	D
1760-1 757 (800-1)	1860-1¼ 857 (900-1¼)	2200-3 1197 (1200-3)	NA	

☒ CIRCLING