
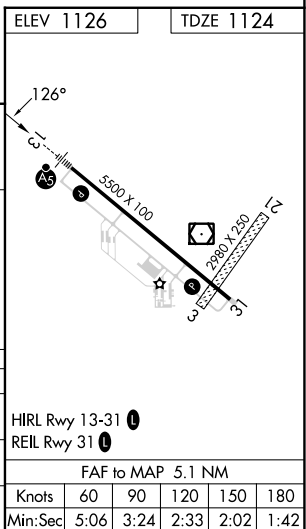
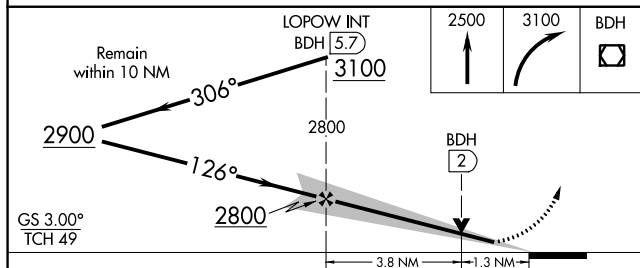


ILS or LOC RWY 13
WILLMAR MUNI/JOHN L RICE FLD (BDH)

MALSR

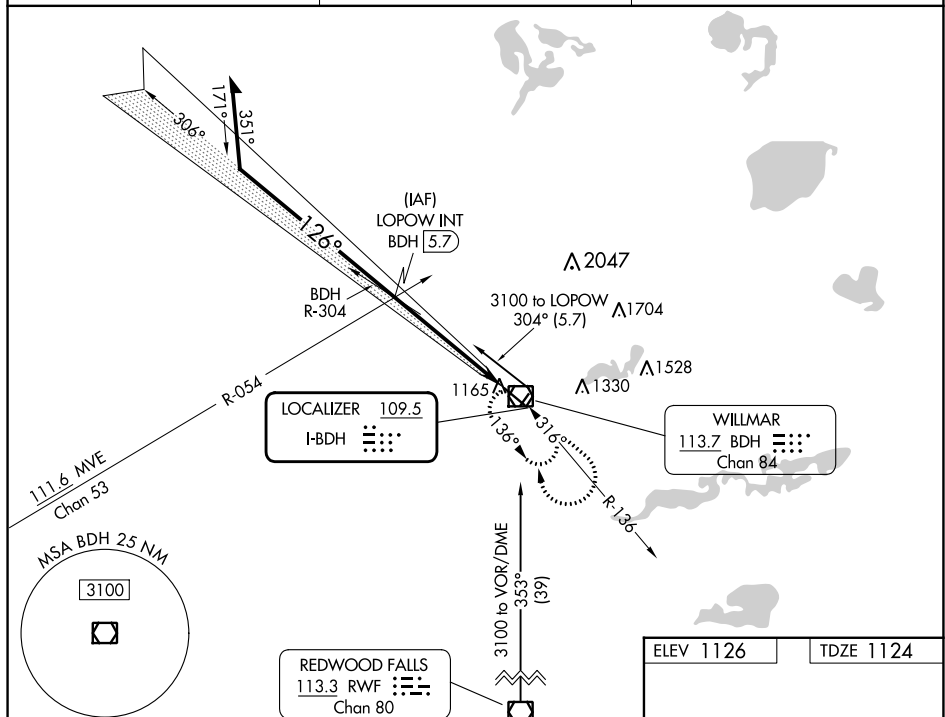

MISSED APPROACH: Climb to 2500 then climbing right turn to 3100 direct BDH VOR/DME and hold, climb-in-hold to 3100.

UNICOM
122.8 (CTAF) **L**

WILLMAR MUNI/JOHN L RICE FLD (BDH)
ILS or LOC RWY 13